



# Parental Controls - Pay Per View / Video On Demand



Step 1: Press the “Menu” key on your remote.

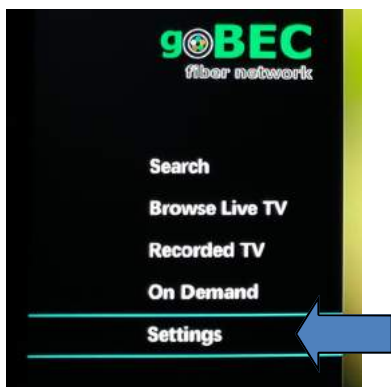

Step 2: Scroll down to “Settings”, then press “OK”.

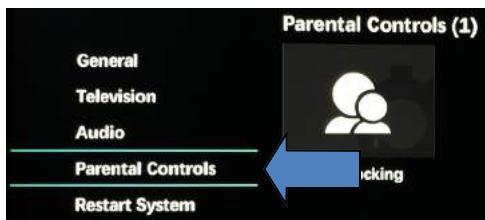


Step 3: Scroll down to “Parental Controls”, then press “OK”.




Step 4: Press “OK” to select “Parental Locking”.




Step 5: Using the number keys on your remote, enter a 4 digit PIN. If you happen to forget your PIN, you may call into the office to reset it.

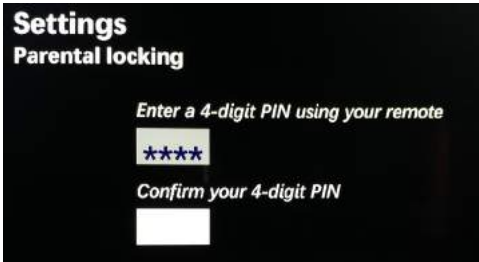


Step 6: Re-enter the PIN code you entered in Step 5 above.

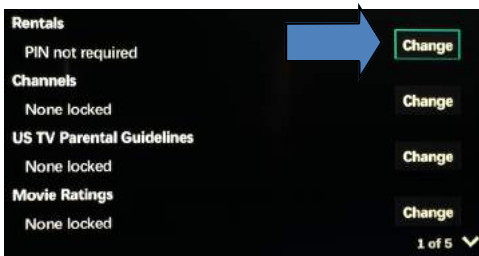


Step 7: Press the “OK” button on your remote to select the “Change” box beside Rentals.

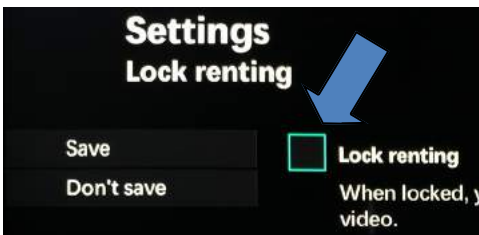

Step 8: Press the “OK” button on your remote to toggle the “Lock Renting” option. You will see a padlock appear in the box.

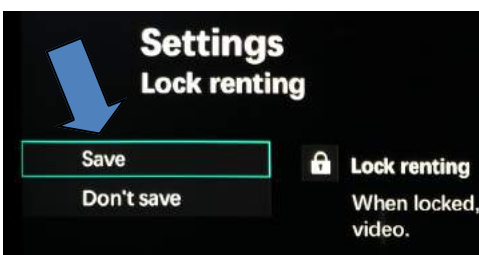

Step 9: Using the arrow keys on your remote, move left to highlight “Save”, then press “OK” to save these settings.

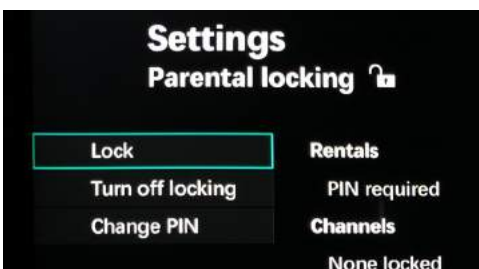

Step 10: Using the arrow keys on your remote, move left to highlight “Lock”, then press “OK” to save these settings. Press the “Exit” button on your remote to return to TV viewing.